CARSTAGES.CO.UK

SAFETY & ASSEMBLY

PLEASE READ ALL 3 PAGES OF THESE SAFETY SHEETS

Please help our delivery driver to unload your CARSTAGES.

To unload turn UPSIDE DOWN. Slide one end to the ground before lowering other end

Finally, stand in centre of each frame and FLIP back upright

Ensure you use supplied WHEELS (often posted) to wheel each frame into position

Ensure you have your FLAPS which require FITTING or BOLTING (see below)

Slide loose tread flap in from INSIDE main frame >

UPSIDE DOWN!




Note how flap treads are **UPSIDE DOWN** when compared to main frame



Pull out of rear SLOT

(If you have bolted flaps see page 3)

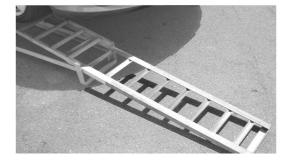

READ THESE INSTRUCTIONS BEFORE USING SEE-SAW CARSTAGES.co.uk

Instruction should remain on the seat of the vehicle on the CarStage..... at all times.

PUTTING ON - REQUIRES 2 PERSONS

Max weight 3000kg. Max wheel base 2900mm

- 1) NEVER load without a guiding assistant window open radio OFF!
- 2) Remember, the front of the car extends 'beyond' the ramp. Allow 1mtr all round.
- 3) Ensure guiding assistant keeps clear and your on firm & level ground
- 4) STOP the car when front wheels reach first tread while still on the floor.
- 5 Get out of car. BOTH re-check. Both AGREE alignment (or move frames)
- 6) Drive up CONSTANT but also SLOW checking tyres (your assistant **BESIDE** you also checks tyres stay on treads). DRIVE TO FRONT STOPS
- 7) Finally, get out carefully and put down or slide inward the rear treads.

MOVING OFF - REQUIRES MINIMUM 2 PERSONS.

- 1) Check BOTH rear treads are UP or OUT before moving off. NEVER hold treads.
- 2) Ensure everybody is clear before moving slowly back until tilt occurs. STOP and ask assistant to check car clears the ground BEFORE continuing to roll down.

Always check for low low skirts or low exhaust

NOTES:

- 1) Flaps MUST be securely bolted or securely fitted INSIDE slots BEFORE the ramps are used. See other pages containing safety for slide in or bolted flaps.
- 2) The maximum wheel base ensures rear wheels are on flap before front wheels pass centre line. We recommend a max wheel base of 2900mm. Flaps are available for longer wheel base.
- 3) Passenger vehicles and vans only. Never put a loaded vehicle on ramps.

USING WHEELS TO MOVE RAMP AROUND (extra wheels are available)

If wheels have been supplied with your CARSTAGES these are ONLY to help move them around. NEVER LOAD A CAR WITH WHEELS IN PLACE. Casters fit across slot or groove on base of frame and tilt.


DO NOT TAKE RISK - CALL 01205 760016 TO ASK ANY QUESTIONSGreat Tips:


Move each frame to line up with the car rather than keep moving car Store casters in framework - bolted flaps should be kept slightly tight Never attempt to load or unload alone & assistant to stand clear

IMPORTANT - BOLTED FLAPS

To maintain TIGHT end flaps - the washers must be placed correctly

IT IS DANGEROUS TO STAND BEHIND THE CAR AND HOLD THE FLAPS

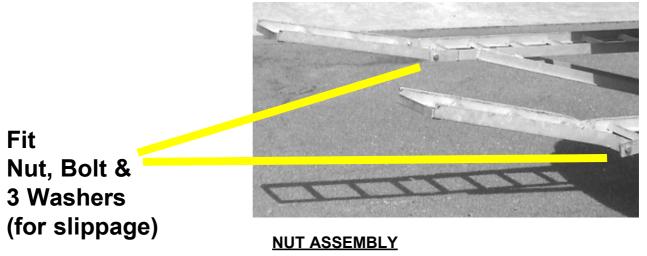

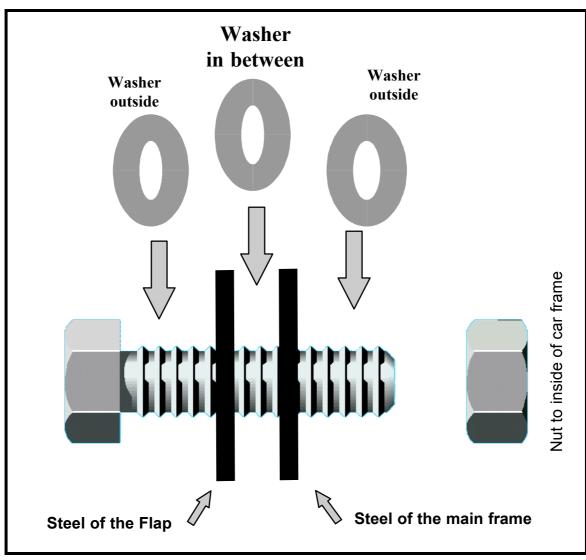

Please note: Even with washers correct, nuts require occasional tightening to ensure flaps hold upward **'by themselves'** when reversing the car.